




# คู่มือการใช้งาน ตู้เซฟโรงแรม

**Hutt 1935B | 2042B | 2045NB**

ควรอ่านคู่มืออย่างละเอียดก่อนใช้งาน

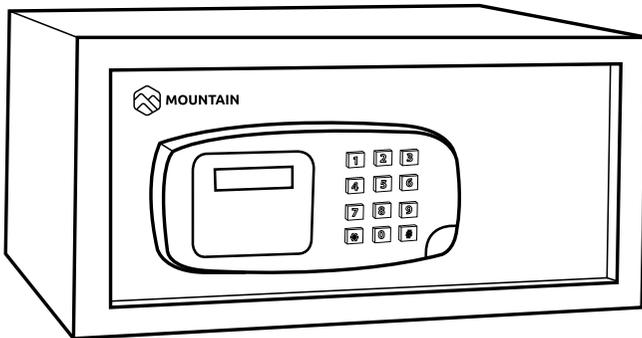

ช่องทางการติดต่อและบริการ

จัดจำหน่ายโดย : บริษัท เอส 24 คอร์ปอเรชั่น จำกัด  
206/1 ม.9 ต.หนองปรือ อ.บางละมุง จ.ชลบุรี 20150

Tel. 083-4162499 Line. @mountainbrand

[www.mountainbrand.co](http://www.mountainbrand.co)



[www.mountainbrand.co](http://www.mountainbrand.co)



Youtube : mountainbrand

## วิธีการติดตั้ง



กรุณาติดตั้งตู้নিরภัยก่อนการใช้งาน โดยมีรูสำหรับติดตั้งอยู่ด้านหลังและด้านล่างของตู้

1. กรณีที่พื้นผิวเป็นผิวซีเมนต์ : เจาะรูบนพื้นผิวหน้าตามรูยึดของตู้নিরภัยใส่ปลอกขยายตัวเข้าไปในรูติดตั้ง ยึดตู้নিরภัยกับสลักเกลียว

2. กรณีเป็นวัสดุไม้ : เจาะรูบนพื้นผิวตามตำแหน่งของตู้নিরภัย ยึดให้แน่นด้วยสกรูเกลียว กรุณาใส่ แบตเตอรี่ และเปลี่ยนรหัสผ่านทันที **ไม่ควรทิ้งกุญแจฉุกเฉินไว้ในตู้নিরภัย**

## สำหรับการใช้งานครั้งแรก

1. กรุณาเปิดฝาดูครอบกุญแจฉุกเฉิน
2. เปิดตู้নিরภัยด้วยคีย์ฉุกเฉิน
3. ใส่ถ่านอัลคาไลน์ (AA) 4 ก้อน ลงในช่องใส่แบตเตอรี่อยู่ที่ด้านหลังของประตู จะปรากฏ " Hello " บนหน้าจอ LCD ตู้নিরภัยจะเข้าสู่โหมดเตรียมพร้อม

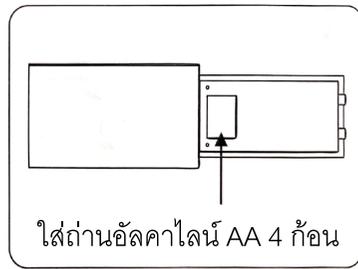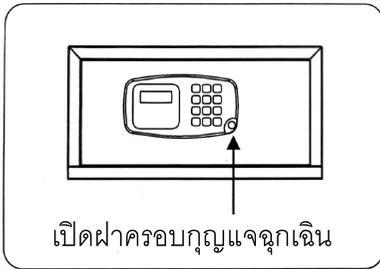

## การเปิดและล็อคตู้নিরภัยเปิดตู้নিরภัย

### วิธีที่ 1 เปิดด้วยรหัสผ่านสำหรับผู้ใช้งาน/แขกผู้เข้าพัก

ป้อนรหัส 3-6 หลัก และกด " # " เพื่อยืนยันรหัส หน้าจอ LCD จะแสดงคำว่า "OPEN" และประตูจะเปิดโดยอัตโนมัติ

คำเตือน! : 1. เมื่อเปิดตู้เซฟแล้ว กรุณาตั้งกุญแจฉุกเฉินออก แล้วนำไปเก็บในที่ปลอดภัย

2. หากต้องการซ่อนรหัสผ่าน คุณสามารถกดปุ่ม " \* " ก่อนใส่รหัสผ่าน เพื่อให้จอ LCD แสดง "-----" แทนรหัสผ่าน)

### วิธีที่ 2 เปิดด้วยรหัสผ่านของผู้ดูแลระบบ (รหัสมาสเตอร์)

(รหัสผ่านผู้ดูแลระบบ /รหัสมาสเตอร์ ของโรงงาน คือ 000000 )

- กดปุ่ม " \* " สองครั้ง จอ LCD จะแสดง " SUPER " แล้วกด รหัสผ่านของผู้ดูแลระบบที่ตั้งไว้ กด " # " หน้าจอ LCD จะแสดง " CC---- "
- กด " 00 " และ " # " จอ LCD จะแสดง " OPENED " และประตูจะเปิดโดยอัตโนมัติ

### วิธีที่ 3 เปิดด้วยกุญแจฉุกเฉิน

เปิดฝาคออบกุญแจฉุกเฉิน เสียบกุญแจฉุกเฉิน และบิดกุญแจตามเข็มนาฬิกา เพื่อเปิดประตูตู้เซฟ  
คำเตือน ! : เมื่อเปิดตู้เซฟแล้ว กรุณาตั้งกุญแจฉุกเฉินออก แล้วนำไปเก็บในที่ปลอดภัย

#### ปิดตู้เซฟ (กรณีตู้เซฟเปิดอยู่)

- ใส่รหัสผู้ใช้งาน / ผู้เข้าพัก 3-6 หลัก
- กด “ # ” เพื่อยืนยันรหัส พร้อมกับกดประตูตู้เพื่อปิด หน้าจอ LCD จะแสดงคำว่า “ CLOSE ”

หมายเหตุ : ผู้ใช้สามารถล๊อคตู้নির্যায়ได้โดยกด “ # ” โดยไม่ต้องกรอกรหัสผ่าน ภายใน 5 นาที  
หลังจากเปิดตู้নির্যায়

คำเตือน ! :

- สามารถกด “ \* ” เพื่อลบรหัส เมื่อกกรหัสผิดได้
- หากใส่รหัสผิด 3 ครั้ง หน้าจอจะแสดงว่า “ HOLD05 ” ระบบจะล๊อคและปุ่มกดจะกดไม่ได้เป็นเวลา 5 นาที

#### การเปลี่ยนรหัสผ่าน

1. เปลี่ยนรหัสผ่านของผู้ใช้งาน กรอกรหัสใหม่ 3-6 หลัก และ “ # ” ในขณะที่ตู้নির্যায়ถูกเปิด ตู้নির্যায়จะปิดและบันทึกรหัสผ่านใหม่

#### 2. การเปลี่ยนรหัสผ่านของผู้ดูแลระบบ

(รหัสผ่านผู้ดูแลระบบ /รหัสมาสเตอร์ ของโรงงาน คือ 000000 )

• ในขณะที่ตู้নির্যায়ปิดอยู่ กด “ \* ” สองครั้ง จอ LCD จะแสดง “ SUPER ” กรอกรหัสผ่านของผู้ดูแลระบบที่ตั้งไว้

- จอ LCD จะแสดง “ CC---- ” กด “ 01 ” ตามด้วย “ # ” หน้าจอ LCD จะแสดงข้อความ “ NEU ”
- กรอกรหัสผู้ดูแลระบบใหม่ 6 หลัก และ กด “ # ” ยืนยัน หน้าจอ LCD จะแสดง “ REPEAT ”
- กรอกรหัสผ่านใหม่อีกครั้ง และกด “ # ” ยืนยัน หน้าจอ LCD จะแสดง “ GOOD ”

#### การตรวจสอบแบตเตอรี่

ขณะที่ประตูตู้ปิดอยู่ สามารถตรวจสอบแบตเตอรี่ได้โดย กด “ # ”

- ถ้าหน้าจอจะแสดงว่า “ Hi-BAT ” = แบตเตอรี่สูง
- และถ้าหน้าจอจะแสดงว่า “ LO-BAT ” = แบตเตอรี่ต่ำ **ควรทำการเปลี่ยนแบตเตอรี่ทันที**

คำเตือน ! : ตู้เซฟจะสามารถเปิดได้บางครั้งเมื่อถ่านอ่อน แต่อาจทำให้แผงวงจรเสีย  
ถ้าท่านไม่รีบเปลี่ยนถ่านเมื่อถ่านอ่อน

## วิธีการแก้ไขปัญหา

**ปัญหาที่ 1** เปลี่ยนรหัสผ่านผู้ดูแลระบบ หรือลืมหรหัสผ่านผู้ดูแลระบบ  
การแก้ไข :

- 1) เปิดตู้নিরภัยและถอดสกรู 4 ตัว ที่ด้านหลังของประตูออก
- 2) ถอดฝาครอบประตูออก จะเห็นคำว่า RESET แล้วใช้คีมหนีบแท่งเหล็ก 2 อันให้ติดกัน ค้างไว้จนเสียงดัง รหัสการดูแลระบบ จะเปลี่ยนเป็น รหัสโรงงาน " 000000 "
- 4) ปิดฝาครอบประตูและขันสกรูให้แน่น เปลี่ยนรหัสผู้ดูแลระบบใหม่



**ปัญหาที่ 2** ไม่มีข้อความแสดงผลบนหน้าจอ LCD

สาเหตุ : แบตเตอรี่อาจไม่เพียงพอต่อการใช้งาน

วิธีการแก้ไข : เปลี่ยนแบตเตอรี่ใหม่

**ปัญหาที่ 3** ปิดประตูไม่ได้ และ ขึ้น ERROR

สาเหตุ : ประตูปิดไม่สนิท

วิธีการแก้ไข : ใส่อรหัสผ่านและปิดประตูอีกครั้ง

## การดูแลและบำรุงรักษา


1. แนะนำให้ใช้ถ่านอัลคาไลน์ ขนาด AA (1.5V)
2. โปรดนำแบตเตอรี่ออกหากไม่ได้ใช้งานเป็นเวลานาน
3. ควรเก็บรหัสผ่านผู้ดูแลระบบและกุญแจฉุกเฉินเอาไว้เป็นอย่างดี
4. หากเกิดการเสียหายหรือมีปัญหา ห้ามแก้ไข/ดัดแปลงตู้নিরภัย ควรติดต่อบริการหลังการขายเพื่อรับคำแนะนำ
5. ถ้ามีคำถามใดๆ กรุณาติดต่อฝ่ายขาย



# User Manual

## Digital Display Safe

Model : Hutt1935B | 2042B | 2045NB

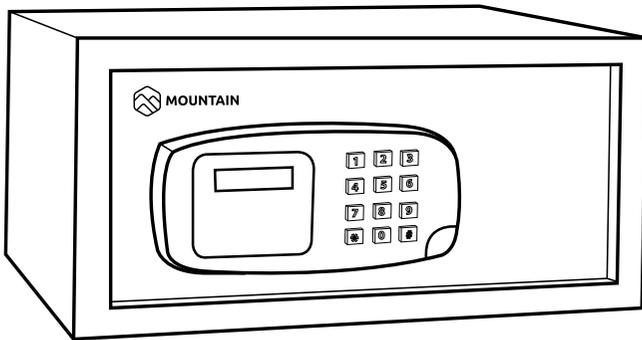

Thank you very much for using this product!  
Before using this product, please read this user manual  
to ensure that you gain the maximum benefit from it!



Line : @mountainbrand



www.mountainbrand.co



Youtube : mountainbrand

## Install Your Safe

Please install the safe before use it and the position of installation holes are located at the bottom of and the back of the safe.

1. Cement Material: Drill holes on the surface according to the mounting hole of the safe, insert the expansion sleeve into the mounting hole, fixed the safe with expansion bolts.

2. Wooden Material: Drill holes on the surface according to the mounting hole of the safe, fixed the safe with self-tapping screw.

When the installation is completed, Please install the battery and change the password at once.

Don't put the emergency key into the safe.



## Operation Instruction

### I. Install Battery and Initialization (AA Alkaline dry Battery is suggested)

1. Please open the cover of the emergency lock when the first time you use it.

2. Open the safe with emergency key.

3. Install 4 pieces of AA size (1.5V) batteries to the battery compartment which is on the back of the door. "Hello" will be displayed on the LCD display, the safe will go into the standby mood.

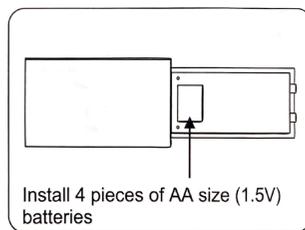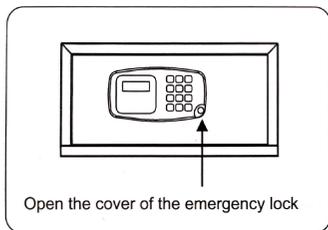

### II. Open&Lock the Safe

#### Open the safe

**1. By guest password.** Enter 3-6 digital number and press "#" to confirm.

The LCD display will show "OPEN" and the door will be opened automatically. (If you want to hide password, you can press "#" button before entering password so that the LCD display will show "-" instead of password)

**2. By the administrator password.** Double press " \* ", the LCD will display "SUPER". Press "000000", and then "#", the LCD will display "CC-" Press "00" and "#", the LCD will display "OPENED" and the door will be opened automatically.

**3. By emergency key.** Open the lock cover and insert the key, the door will open.

## Lock The Safe

Please enter 3-6 digits personal password while the door is closed, and press " # " to confirm the password "CLOSE " will be displayed on the LCD (The user can lock the safe by press " # " directly without changing the password within 5 minutes after opening the safe)

Remark : "ERROR " will be displayed if the lock-bolt is jammed  
please open the door again to keep sure the door is closed normally.

## Changing The Password

(the factory standard password for hotel is "000000" )

**1. Changing the end user's password.** Pressing new 3-6 digital numbers and " # " while the safe is opened, the safe will be locked.

**2. Changing hotel management password.** This need to be operated while the safe is locked.

- Double press " \* " ,the LCD will display "SUPER". Press the hotel management password,

- the LCD will display" CC-----". Press " 01 " and " # " ,the LCD will display "NEU".

- Press new 6 digital numbers as the password, then press " # " as confirmed, the LCD will display" REPEAT",

- then press again the new password and " # " as confirmed, the LCD will display "GOOD".

## Battery check

While the door is closed, press " # " , it shows Hi-BAT mean high battery, LO-BAT mean low battery, please change the battery.

## Normal Troubleshooting

**Problem 1** : Change the Administrator or forget the Administrator Password

### Resolution:

- 1) Open the safe and remove four screws on the back of the door.
- 2) Remove the door cover and the red button.

Hold the 2 iron bars together until a beep sounded

3) the administration code will be changed into the initial administrator password 000000"

4) Close the door cover and tighten the screws, change the administrator password.



**Problem 2** : There is no display on the LCD

Reason: Maybe there is no enough power of the battery

Resolution: Changing the battery with new one.

**Problem 3** : Cannot close the door and get on ERROR.

Reason: The door is not totally closed.

Resolution: Press the password and close the door again.

## Care and Maintenance

1. Suggest to use AA size (1.5V) Alkaline batteries;
2. Please take out the batteries if the safe will not use for a long time;
3. The administrator password and the emergency key should be kept and used by administrator.
4. Please do not take apart the safe once malfunction happens. Contact the after sale service for advice.
5. Any technical date and performance improvement will not have further notice. If any question, please contact with sale service, thank you.